



Miele

36" Downdraft Hood
Flush Mounting

DA 6891 Levantar



This document is in no way a substitute for the Operating Instructions and Installation Specifications supplied with the appliance. Please refer to the Operating Instructions and Specifications supplied with your appliance (or online at miele.ca) prior to installing or using for the first time.

 miele.ca
Specification Sheets TRS 03092017

36" Downdraft Hood DA 6891 Levantar

Miele

- Flush Installation



DA 6891

Features:

- Very sleek and modern look
- Touch on glass controls
- LED ClearView lighting with dimmer functionality (1 x 6W)
- Telescopic downdraft system raises 16" over cooktop surface
- Four fan speeds (incl. intensive)
- Dishwasher-safe stainless steel filter hidden behind black glass panels
- Option of DAG 600 internal blower or DAG 1000 external blower
- Vented or recirculating
- Delayed shutdown: 5 or 15 minutes

SPECIFICATIONS

DA 6891 w/DAG600

DA 6891 w/DAG1000

Overall Unit Width 36" (915 mm)

Overall Unit Height (Unextended) 25 ¹¹/₁₆" (652 mm)

Overall Unit Height (Extended) 41 ¹¹/₁₆" (1,058 mm)

Overall Canopy Height 16" (406 mm)

Overall Unit Depth 4 ³/₄" (120 mm)

Built-In

Minimum Opening Width 31 ¹⁵/₁₆" (812 mm)

Minimum Opening Depth 4 ¹/₄" (108 mm)

Minimum Opening Height (Including Countertop) 25 ¹³/₁₆" (656 mm)

Fan

Fan Speeds 4

Blower DA 6891 w/DAG 600
DA 6891 w/DAG 1000

Duct

Duct Diameter DAG 600 → 6" (150 mm)
DAG 1000 → 10" (254 mm)

Electrical

Electrical Requirements 120V, 60Hz, 15A

Power Cable

Ventilation system must be hardwired

Shipping

Shipping Weight 74 lbs (33.6 kg)

Shipping Dimensions 42 ⁷/₈" W x 30 ⁵/₈" H x 10 ⁷/₈" D


Support

Call Miele 800.565.6435


Miele Website www.miele.ca

If you are planning to install an oven in front of the appliance, the appropriate installation advice and dimensions regarding cool air circulation must be observed.

STANDARD ACCESSORIES

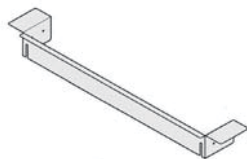

Single Support Bracket for
One Cutout Installation



Two Support Brackets for
One or Two Cutout(s)
Installations

36" Downdraft Hood DA 6891 Levantar - Flush Installation



OPTIONAL ACCESSORIES



DAG 600
Internal Blower



DAG 1000
External Blower



R1200
Reducing collar limits air
flow with DAG 600



DUU 2900
Recirculation kit for use
with DAG 600



DUU 150
Recirculation kit
for straight ductwork



DUU 151
Recirculation kit
for curved or bending
ductwork



DKF18-1
Replacement OdorFree
charcoal filter for DUU 2900




DKF 22-1
Replacement OdorFree
charcoal filters for use with
DUU 150 and DUU 151

36" Downdraft Hood

DA 6891 Levantar

- Flush Installation

Miele

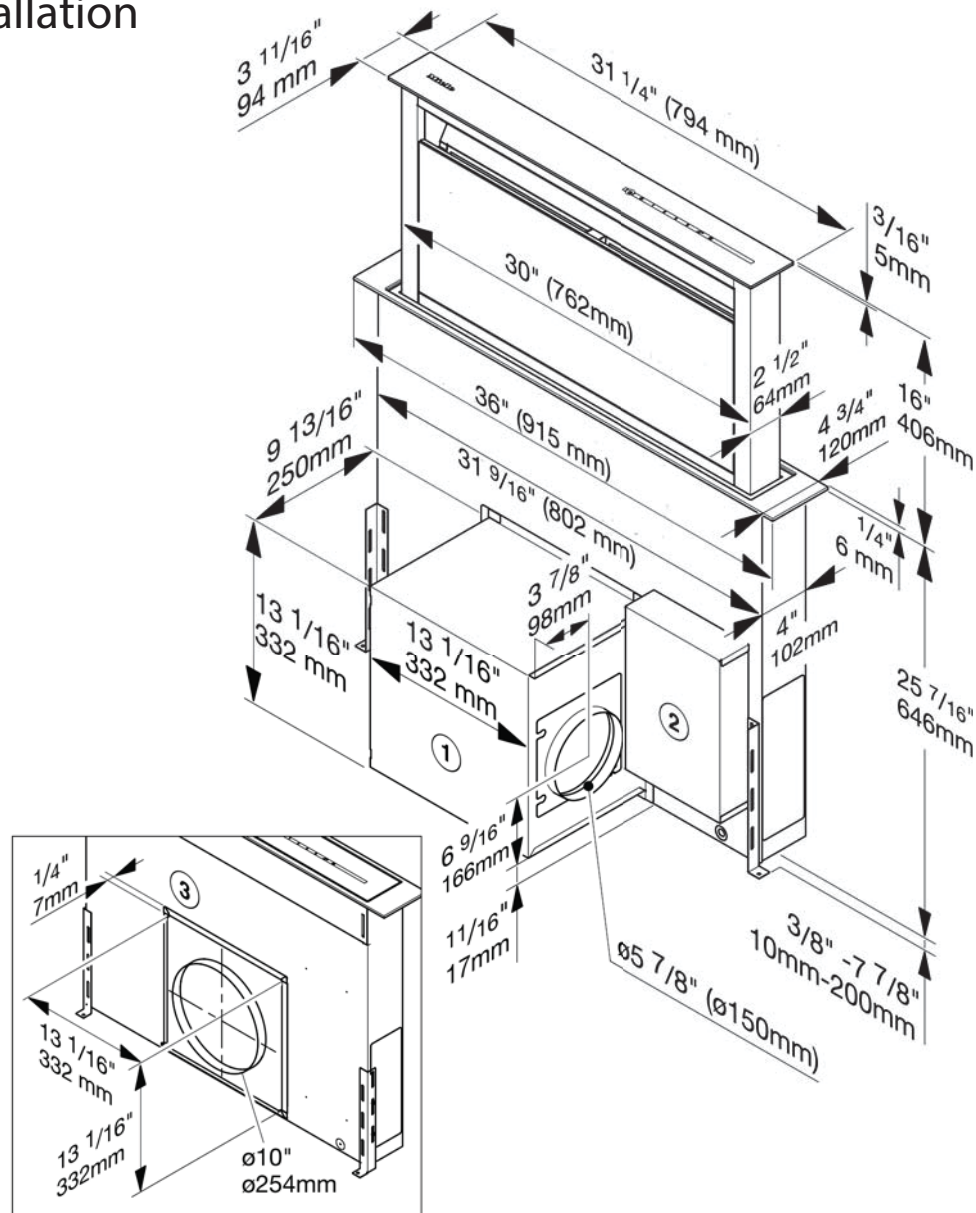

- ① The DAG 600 blower can be rotated and mounted with the exhaust air direction pointing up, to the left, to the right or down.
- ② The connection box can be positioned anywhere in the cabinet. The DA 6891 can be mounted to the left, right or behind the blower.
- ③ Cover for use with the DAG 1000 external blower.

The DAG 600 blower or the cover for the DAG 1000 blower can also be installed in the same position at the back of the appliance.

Exhaust connection:

with internal DAG 600 blower: Ø 6" (150 mm).

with external DAG 1000 blower: Ø 10" (254 mm).

Please refer to the cooktop manufacturer's instructions when installing in combination with a cooktop. The installation and safety distance requirements must be maintained.

The total output of a multi-burner gas cooktop must not exceed 21.6 kW, with no single burner exceeding 4.8 kW. Gas cooktops with a greater output cannot be used in combination with this downdraft.

36" Downdraft Hood

DA 6891 Levantar

Miele


- Flush Installation

TWO INDIVIDUAL CUTOUTS INSTALLATION SPECIFICATIONS

Cutout Dimensions for Two (2) Cutouts

- Flush Mount Installation

- Allows for Installation with Flush Mounted Downdraft in Combination with Flush or Proud Mounted Combisets and Cooktops

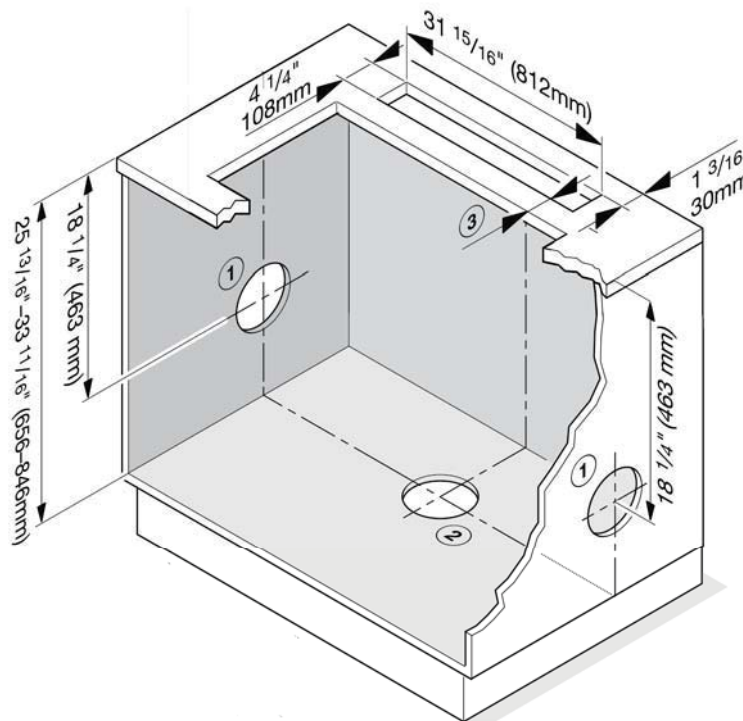

Exhaust or recirculation mode with DAG 600 blower installed at the front of the downdraft. Exhaust ducting (Ø 6" (150 mm))

- ① Exhaust ducting to the right or left.
- ② Exhaust ducting downwards.
 - a) Overhang of the cooktop
 - b) Cooktop cutout
- ③ If the downdraft and cooktop are installed in separate cutouts, ensure adequate stability of the strip in between.

If the blower is to be installed at the back of the downdraft, ensure that there is adequate space for installation.


36" Downdraft Hood DA 6891 Levantar

Miele

- Flush Installation


TWO INDIVIDUAL CUTOUTS
INSTALLATION SPECIFICATIONS
Cutout Dimensions for Two (2) Cutouts

- Flush Mount Installation
- Allows for Installation with Flush Mounted Downdraft in Combination with Flush or Proud Mounted Combisets and Cooktops

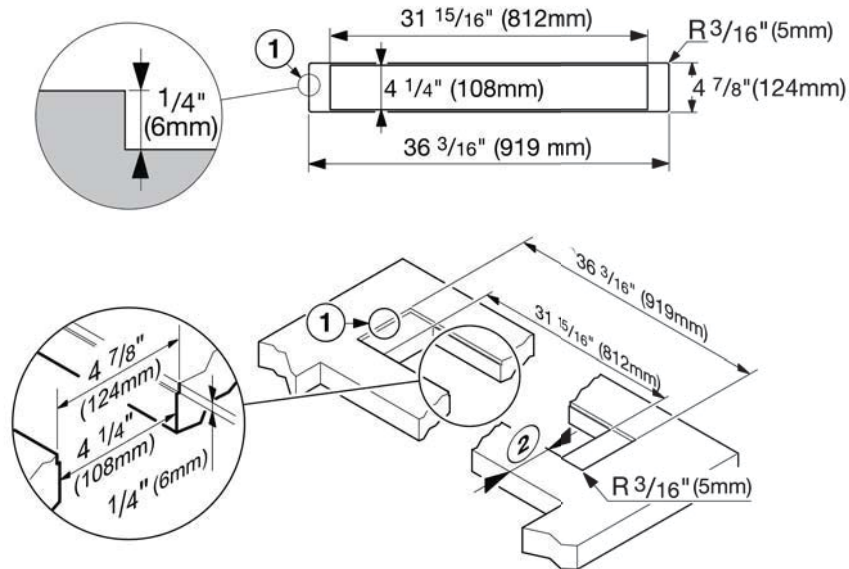

- ① Stepped cutout for flush-fit installation in stone worktops (granite, marble)
- ② If the downdraft and cooktop are installed in separate cutouts, ensure adequate stability of the strip in between.

INSTALLATION SPECIFICATIONS
Two (2) Individual Cutout Support
Brackets (Included)

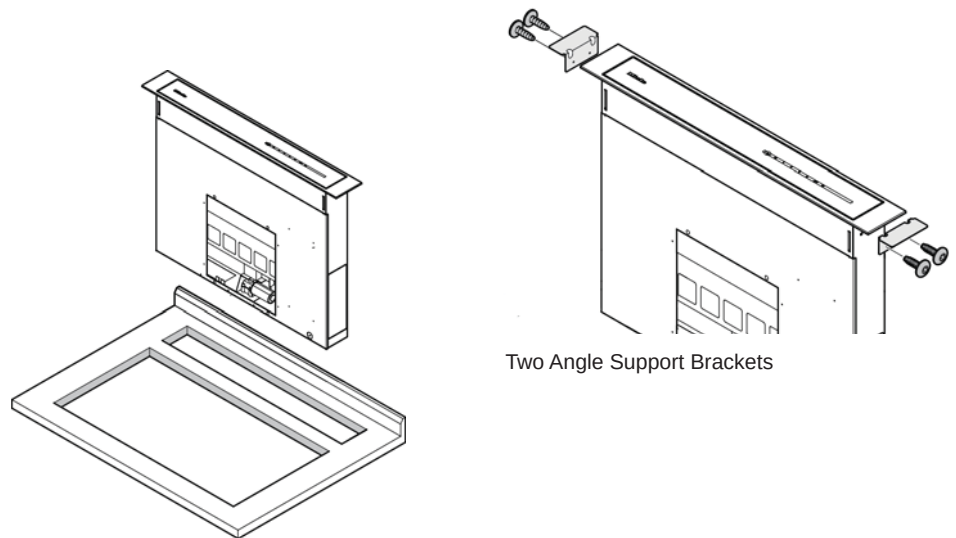

Two Angle Support Brackets


Two small angle brackets are mounted on the downdraft extractor. They serve as a support for the downdraft extractor when the downdraft extractor and cooktop are installed in two separate cutouts.

36" Downdraft Hood - DA 6891 Levantar

Miele

- Flush Installation

EXTERNAL BLOWER DAG 1000
(Optional Accessory)

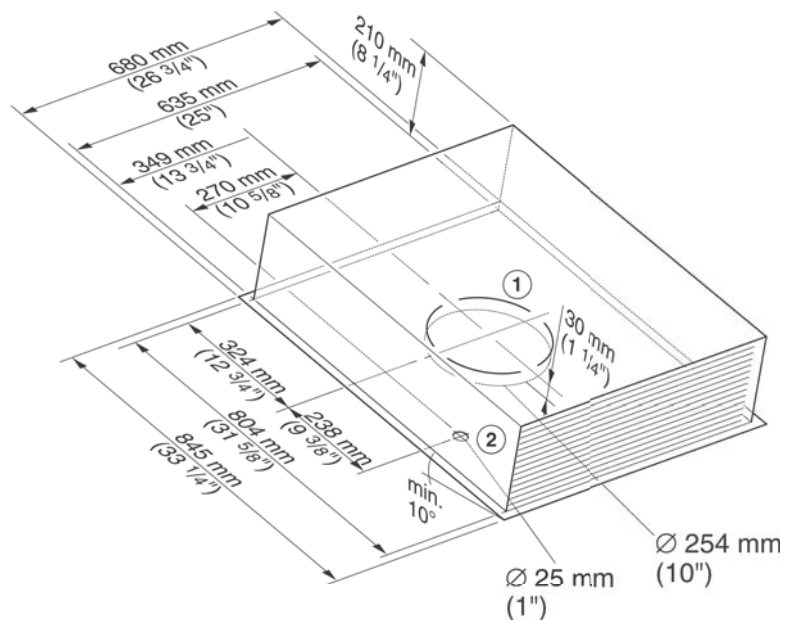

- ① Exhaust air connection
- ② Power cord feed-through (strain relief)


36" Downdraft Hood

DA 6891 Levantar


- Flush Installation



EXTERNAL BLOWER DAG 1000 - CONTINUED
(Optional Accessory)

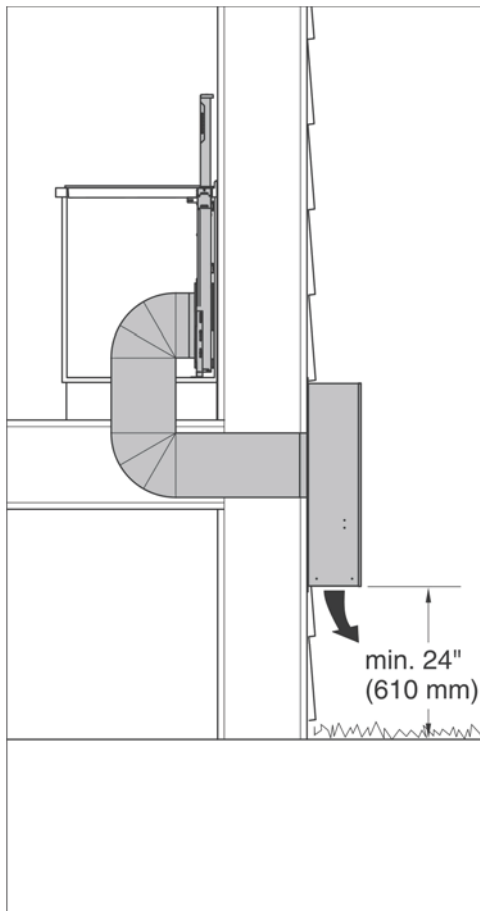

Example: Installation on an external wall

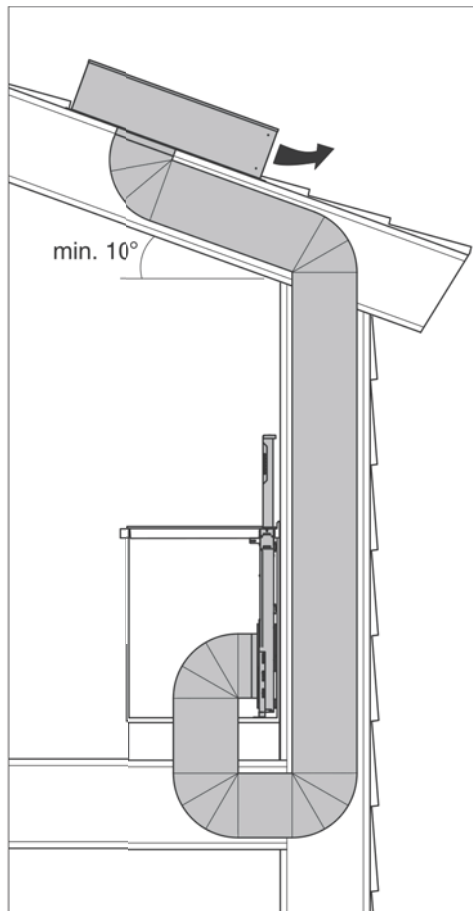

Example: Installation on a roof


The exhaust connection can be connected to either the front or back of the downdraft. For more information see the installation diagram for the downdraft.

36" Downdraft Hood DA 6891 Levantar

Miele

- Flush Installation

Recirculation Kit DUU 2900
(Optional Accessory)

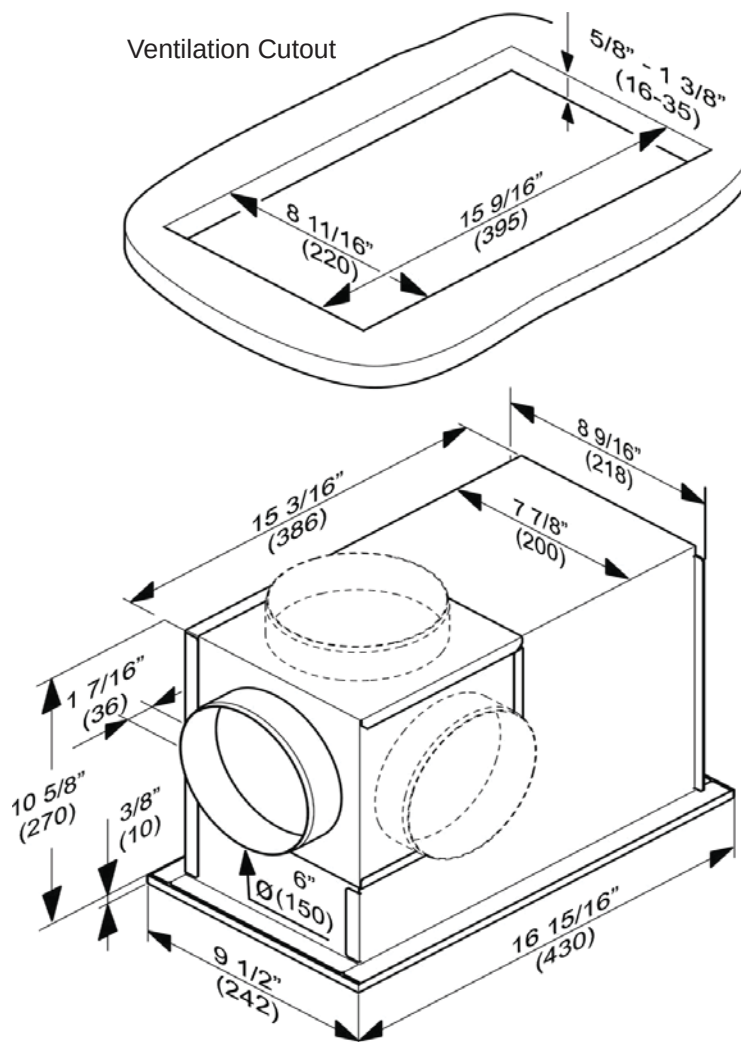


36" Downdraft Hood

DA 6891 Levantar

- Flush Installation

Recirculation Kit DUU 150
(Optional Accessory)

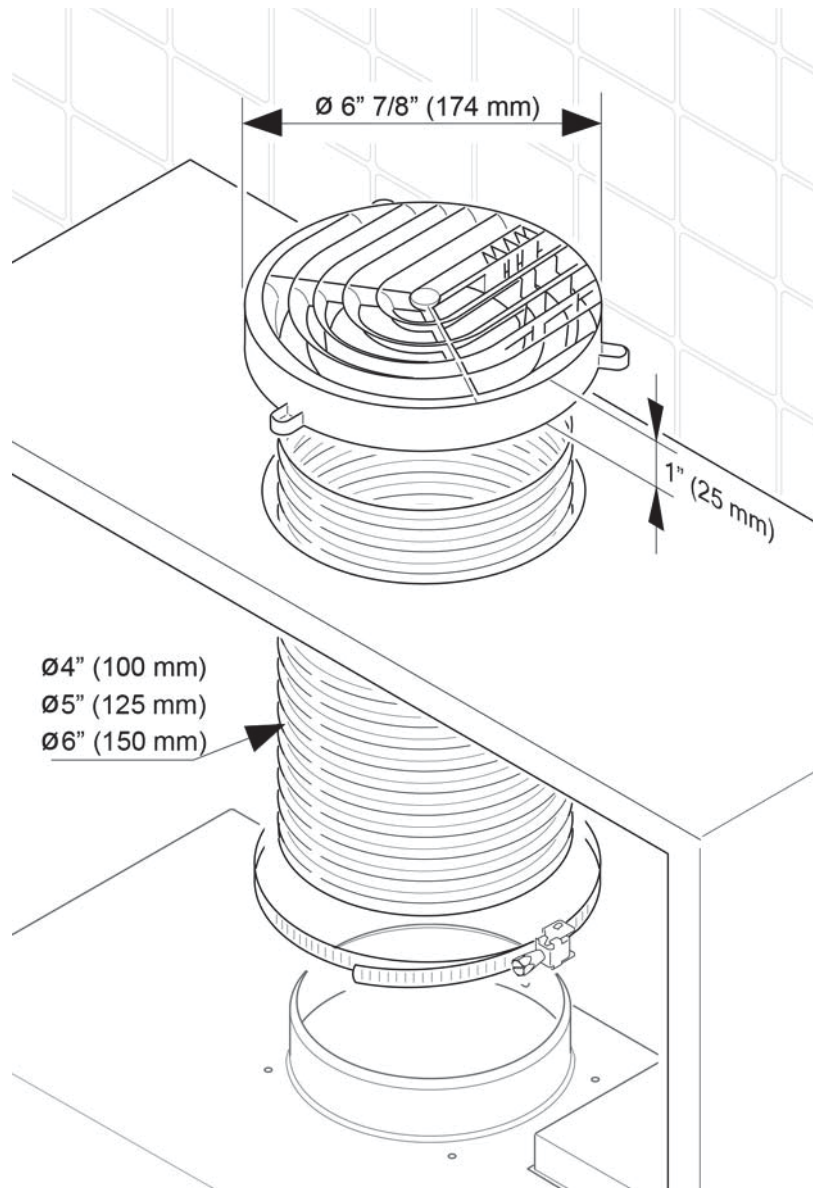


36" Downdraft Hood DA 6891 Levantar

Miele

- Flush Installation

Recirculation Kit DUU 151
(Optional Accessory)

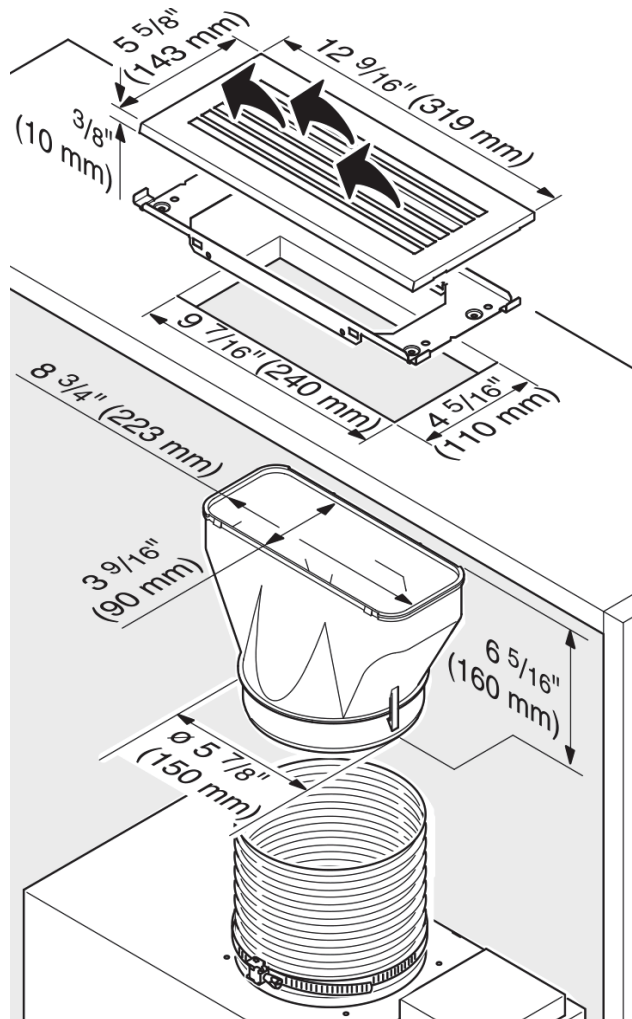


36" Downdraft Hood DA 6891 Levantar

Miele

- Flush Installation

Reducing Collar
(Optional Accessory)

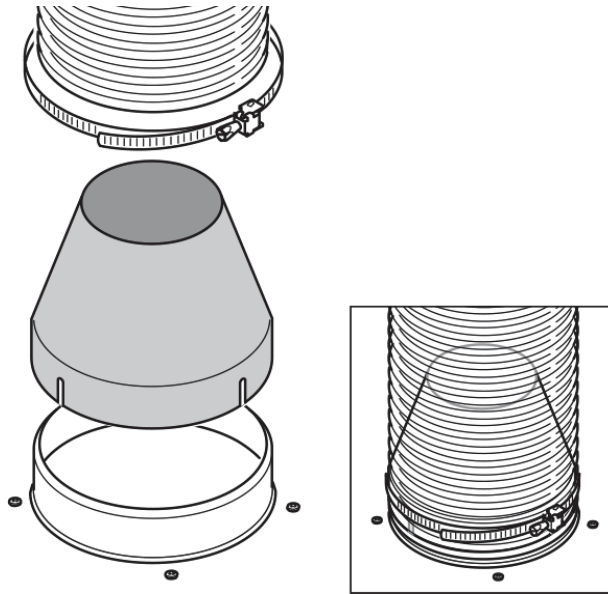

If you would like to reduce the environmental impact of your ventilation system the Reducing Collar can be installed.